


Brillia LP-NNV

High speed photopolymer plate for newspaper applications

Designed specifically for newspaper production with violet laser diode-equipped platesetters, Brillia LP-NNV provides extra long run-lengths and precise highlight dot printing together with the benefits of FUJIFILM's patented MultiGrain technology for reduced ink usage and improved ink/water balance.

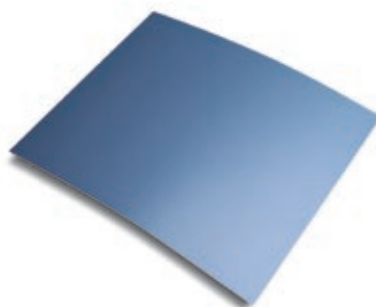

- ▶ Sharp dots from highlights to shadow areas
- ▶ Long developer life for reduced maintenance
- ▶ Bright yellow safelight
- ▶ Suitable for up to 300,000 impressions
- ▶ 2 – 98% dot at 100 lpi

Specifications

Brillia LP-NNV	
Print application	newspaper
Laser type	violet LD 405 nm
Sensitivity	0.05 mJ/cm ²
Resolution	100 lpi (2 – 98%)
Gauges	0.30 mm
Safelight	Encapsulite G10, OSRAM L36W62
Contrast	excellent
Developer	LP-DS / LP-DZ
Replenisher	LP-DRN / LP-DRZ
Bath life	2,000 m ² or up to 4 weeks
Gum	FN-6CWE / FN-6NWE
Run length*	300,000

*Run lengths are always dependent on laser power, processing and press conditions. Figures shown are based on typical newspaper printing conditions.

The FUJIFILM Brillia newspaper CTP plate range supports both thermal and visible light platesetters, with economical processed and chemistry-free options to suit a wide range of newspaper production requirements.

Please contact your local FUJIFILM partner for further information.

FUJIFILM

**FUJIFILM Deutschland
Niederlassung der
FUJIFILM Europe GmbH**
T +49 211 5089 255
grafische_systeme@fujifilm.de
www.fujifilm.de

FUJIFILM UK Ltd
T +44 1234 245 245
marketing.fgs@fuji.co.uk
www.fujifilm.co.uk/gs

**FUJIFILM Graphic Systems
France SAS**
T +33 1 64 76 71 00
commercial@fujigraphic.fr
www.fujifilmgraphic.fr

FUJIFILM Danmark A/S
T +45 45 66 22 44
fujifilm@fujifilm.dk
www.fujifilm.dk

FUJIFILM Italia S.r.l.
T +39 02 89 58 21
graphic.arts@fujifilm.it
www.fujifilm.it

Specifications are subject to change without notice. The name FUJIFILM and the FUJIFILM logo are trademarks of FUJIFILM Corporation. All other trademarks shown are trademarks of their respective owners. All rights reserved.

Environmental printing specifications: Printer: Breckland Print – ISO 14001-accredited and FSC-certified. Plates: FUJIFILM Brillia HD PRO-T – processless plates that eliminate the processor, chemistry, water and waste from plate production. Paper: Greencoat Plus Velvet – FSC-certified, 80% post-consumer waste recycled. Inks: Ultrachem Reflecta eco – vegetable-based.